FRAMOS Industrial Depth Camera D400e Series - External Event Camera Synchronization

APPLICATION NOTE

Version 1.0.0 from 2020-06-30

www.framos.com

Table of Contents

1. Overview 4

2. Functional Description 5

2.1 External Event Operation 5
2.1.1 Software Trigger 7

3. Hardware Configuration 8

3.1 Schemes 10
3.1.1 Opto-Isolated OUT/IN Schemes 10
3.1.2 Synchronization Scheme 11

3.2 Recommendations 11
3.2.1 External Synchronization Pulse 11
3.2.2 VSYNC Output 12

4. Software Configuration 13

4.1 Camera Settings 13
4.1.1 Setting Operating Mode 13
4.1.2 External Event Mode 14

5. Hardware Validation 19

5.1 Frame Jitter 19

6. Troubleshooting 21

6.1 Software Trigger Issues 21
6.1.1 Exceptions 21
6.1.2 Rendering 22
6.1.3 Post-processing 23

7. References 25

8. Revision History 26

List of Figures

Figure 1 – Opto-isolated OUT in "Master Mode", VSYNC, 30Hz 5
Figure 2 – External Event Operation 5
Figure 3 – SYNC PULSE, VSYNC 6
Figure 4 – Software trigger, RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS 7
Figure 5 – Power M8 Connector, A-Coded, Male 8
Figure 6 – Opto-Isolated OUT Scheme 10
Figure 7 – Opto-Isolated IN Scheme 10
Figure 8 – External Event Synchronization Scheme 11
Figure 9 – External Synchronization Pulse 12
Figure 10 – Setting camera operating mode to external event mode 14
Figure 11 – Selecting external event source: Hardware 15
Figure 12 – Selecting external event source: Software 16
Figure 13 – Setting RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS 17
Figure 14 – Executing software trigger 18
Figure 15 – Real Time Frame Jitter Histogram 19
Figure 16 – FRAMOS D435e Camera Streaming in External Event Mode 20
Figure 17 – Changing "Ext Trigger Source" in wrong "Inter Cam Sync Mode" 21
Figure 18 – Executing "Software Trigger" with wrong "Ext Trigger Source" 22
Figure 19 – Frame numbers vary with synchronization in RealSense Viewer enabled 22
Figure 20 – Disable synchronization between the pointcloud and the texture 23
Figure 21 – Post-processing active 23
Figure 22 – Post-processing disabled 24

List of Tables

Table 1 – Maximum frame jitter for various frame rates 6
Table 2 – M8 Connector Pin Description 8
Table 3 – Electrical Specification for Opto-Isolated Input 8
Table 4 – Electrical Specification for Opto-Isolated Output 9
Table 5 – Frame Jitter Result on 10000 Trigger Pulses 19
Table 6 – Revision History 26

List of Abbreviations

Abbreviation	Explanation
SDK	Software Development Kit
NIC	Network Interface Card
I/O	Input/output
DC	Direct Current
GND	Ground
VDC	Volts Direct Current
HW	Hardware
IN	Input
OUT	Output

1. Overview

The *FRAMOS Industrial Depth Camera D400e Series - External Event Camera Synchronization* application note provides general recommendations on how to synchronize FRAMOS D400e camera series to an external event.

Stream synchronous to an external event can be achieved by:

- Hardware: utilizing the camera's external synchronization interface
- Software: sending the software trigger command

Additionally, the cameras need to be configured via the software interface to work in such environment.

Information: All the information given in this application note is valid for FRAMOS D400e camera series firmware version v1.8.0.0 (or higher) for D435e, and v1.3.0.0 (or higher) for D415e. Required D400e software package version is v1.9.0 (or higher).

2. Functional Description

By default, FRAMOS D400e camera series is in "Default Mode", streaming at the requested frame rate. When operating in "Master Mode" (refer to *FRAMOS Industrial Depth Camera D400e Series - Multi-Camera Synchronization* [Ref-2] for operating modes explanation), the camera outputs synchronization signal on the Opto-isolated OUT (VSYNC) as shown in Figure 1. VSYNC signal is related only to stereo sensor. RGB sensor does not output signal on the Opto-isolated OUT.

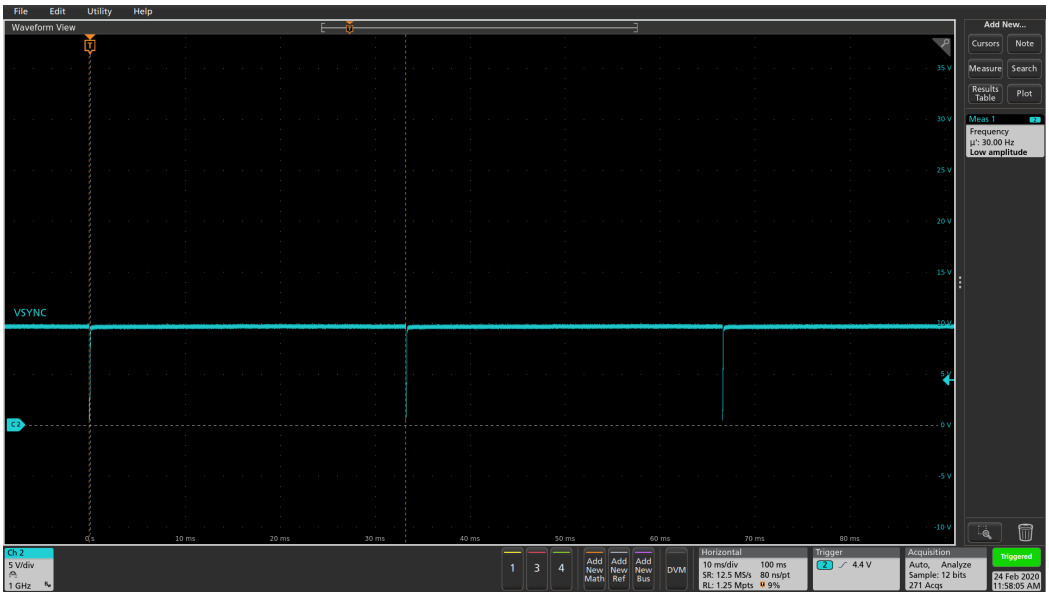

Figure 1 – Opto-isolated OUT in "Master Mode", VSYNC, 30Hz

2.1 External Event Operation

In "External Event" operating mode, camera works in continuous mode at the requested frame rate, but no frames are sent to the host. When external pulse is applied on the synchronization interface or software trigger command is sent, camera sends the next frame generated to the host as shown in Figure 2.

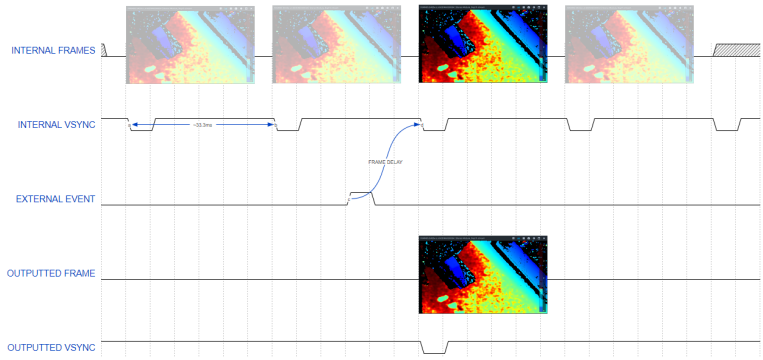

Figure 2 – External Event Operation

As the external event is asynchronous to the internal camera sensor timing, there will be a variable delay between the input pulse (hardware or software) and the generated frame, as shown on Figure 3, where SYNC PULSE is the external pulse applied to the camera, while VSYNC represents the start of the generated stereo frame that is sent to host.

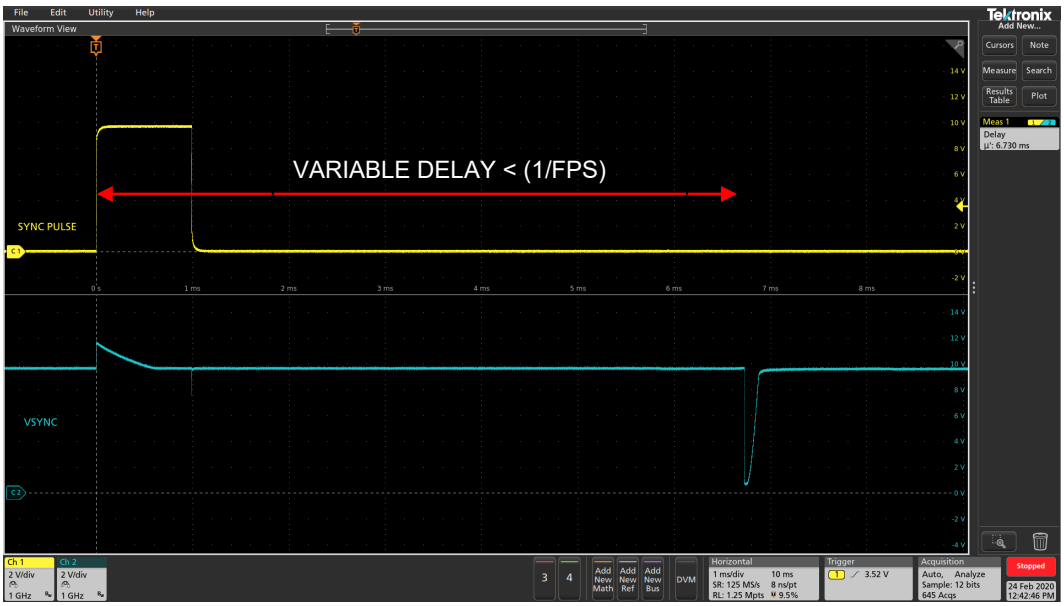

Figure 3 – SYNC PULSE, VSYNC

This variable delay (frame jitter) will never exceed the 1 frame readout time. Maximum delays (T_{MAX}) for various frame rates are given in Table 1.

FPS	T_{MAX} < 1/FPS
60 Hz	16.66 ms
30 Hz	33.33 ms
15 Hz	66.66 ms

Table 1 – Maximum frame jitter for various frame rates

Information: In multi-camera system, where cameras are triggered by external event, each camera will have different frame jitter. The reason for this is that each camera works with its own internal camera sensor timing.

2.1.1 Software Trigger

In "External Event" software trigger operating mode, stereo and RGB sensors work in continuous mode at the requested frame rate, with no frames sent to the host. When software trigger command is sent to either stereo or RGB, camera sends the next frame generated to the host as shown in Figure 2.

Stereo sensor has additional option "RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS" that specifies whether the trigger signal is forwarded to all sensors or is sent to stereo sensor only.

When "RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS" is set to 1, trigger signal is sent to all sensors and camera sends the next frames generated to the host as shown in Figure 4.

If "RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS" is set to 0, software trigger signal is sent to stereo sensor only and camera sends the next stereo frame generated to the host as shown in Figure 4.

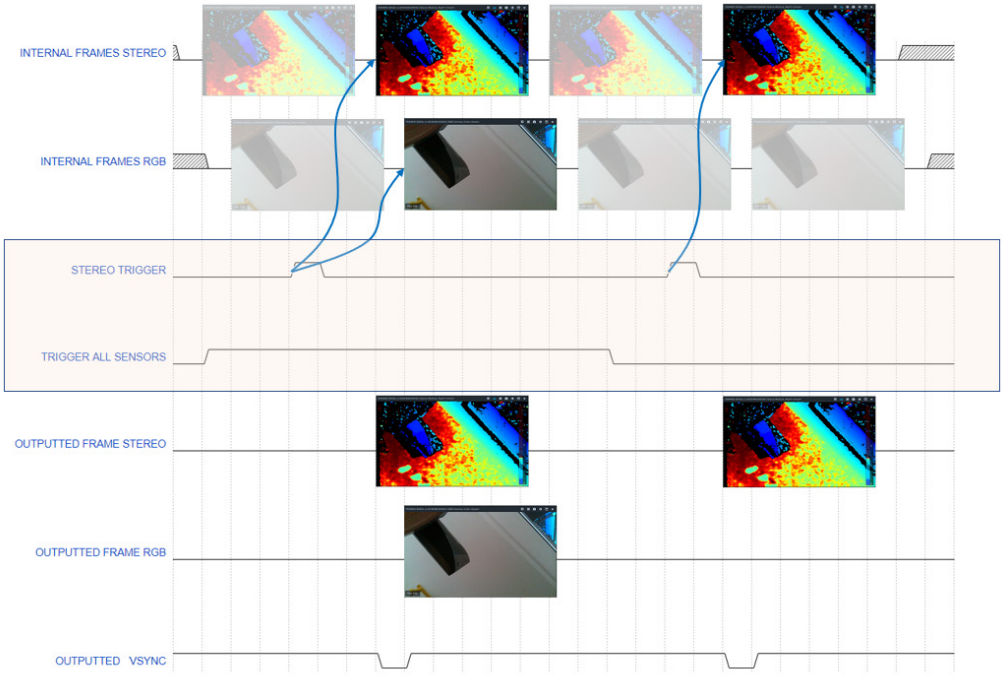

Figure 4 – Software trigger, RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS

Information: Camera outputs **VSYNC** signal only for stereo sensor.

3. Hardware Configuration

The FRAMOS Industrial Depth Camera D400e series is equipped with an industrial grade M8 connector used for power supply and external synchronization through the I/O interface as shown in Figure 5 and described in Table 2.

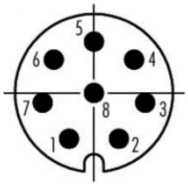

Figure 5 – Power M8 Connector, A-Coded, Male

M8 Pin	Description
1	DC Power supply, 12-24V DC (+/- 10%)
2	Opto-isolated IN
3	Opto-isolated OUT
4	GND for opto-isolated I/O
5	Direct coupled I/O (optional)
6	Direct coupled I/O (optional)
7	Not used
8	GND

Table 2 – M8 Connector Pin Description

The physical input line **Opto-isolated IN** (Pin 2) is designated as opto-isolated input. The operational limits of the opto-isolated input are given in Table 3.

Description	Limits
Recommended operating voltage	+0 to +24 VDC
Voltage level representing logical 0	+0 to +1.4 VDC
Voltage level representing logical 1	> +2.2 VDC
Absolute maximum voltage	+30.0 VDC
The current draw for each input line	5 to 15 mA

Table 3 – Electrical Specification for Opto-Isolated Input

Physical output line **Opto-isolated OUT** (Pin 3) is designated as opto-isolated output. The operational limits of the opto-isolated output are given in Table 4.

Description	Limits
Recommended operating voltage	+3.3 to +24.0 VDC
Absolute maximum voltage	+30.0 VDC
Maximum output current	90 mA

Table 4 – Electrical Specification for Opto-Isolated Output

Caution: Exceeding the operational limits given in Table 3 and Table 4 can cause permanent damage to the device.

3.1 Schemes

3.1.1 Opto-Isolated OUT/IN Schemes

Electrical scheme of **Opto-isolated OUT** is shown in Figure 6.

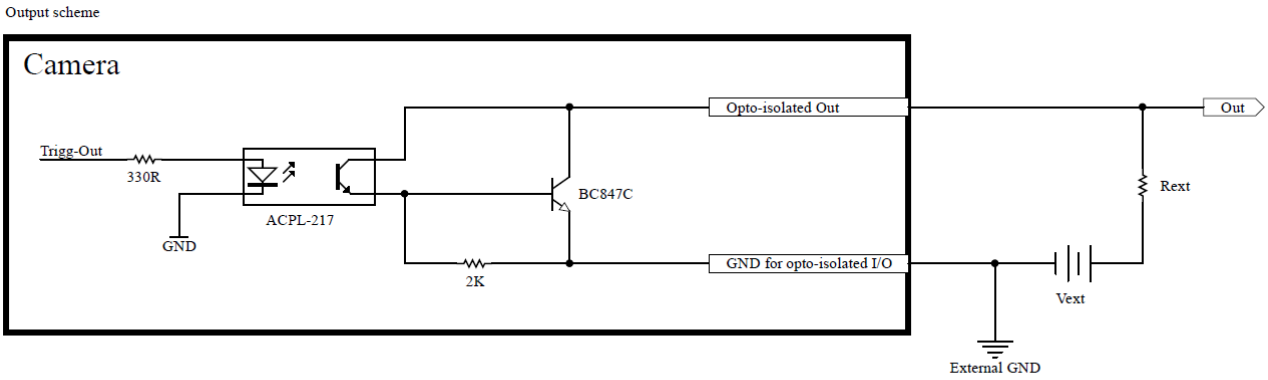

Figure 6 – Opto-Isolated OUT Scheme

Electrical scheme of **Opto-isolated IN** is shown in Figure 7.

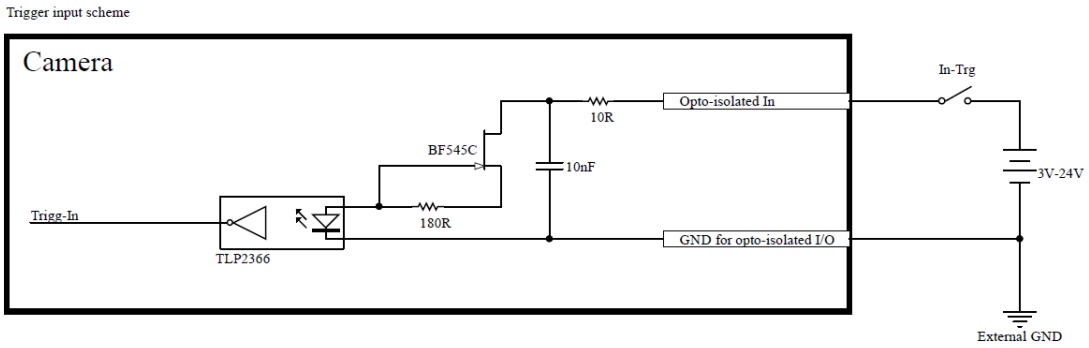

Figure 7 – Opto-Isolated IN Scheme

3.1.2 Synchronization Scheme

The electrical scheme of synchronization of multiple cameras to the external event is shown in Figure 8.

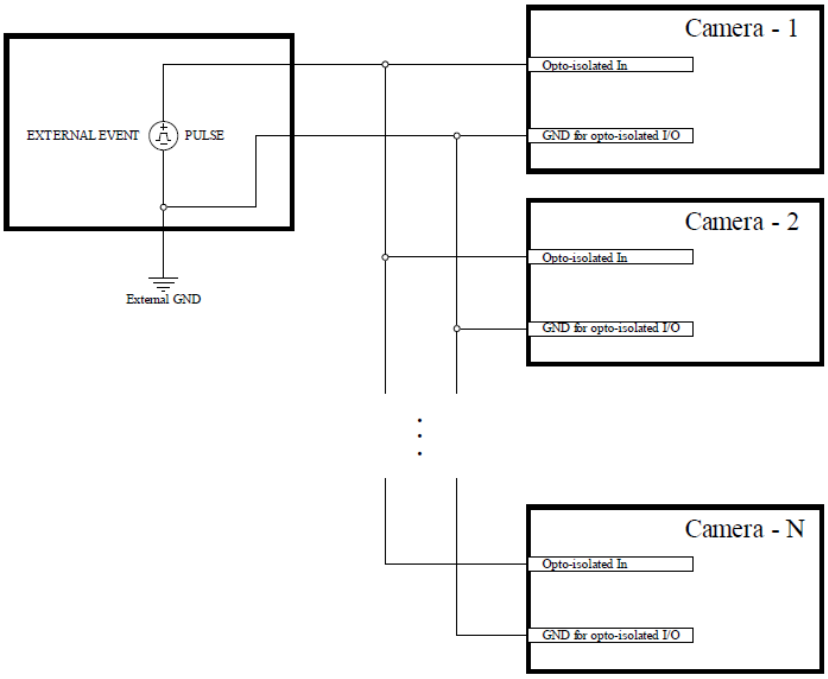

Figure 8 – External Event Synchronization Scheme

For HW synchronization to the external event, External Event Pulse Generator output is connected to Opto-isolated IN of multiple cameras as shown in Figure 8. Additionally, GND for opto-isolated I/O of all cameras is common.

3.2 Recommendations

3.2.1 External Synchronization Pulse

When applying an external synchronization pulse, it is recommended to generate pulse as shown in Figure 9.

For the signal amplitude, follow the electrical specification for opto-isolated input given in the Table 3.

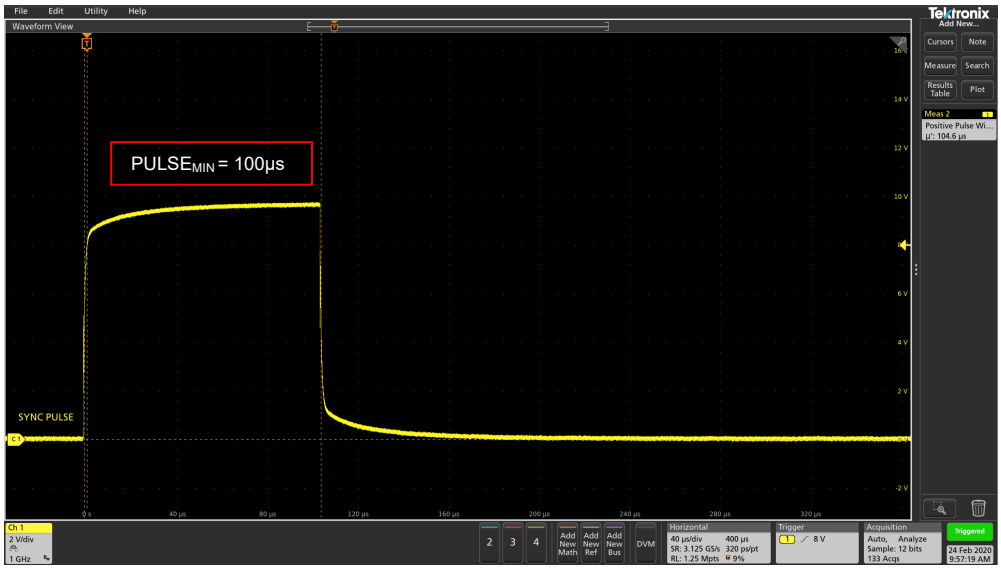

Figure 9 – External Synchronization Pulse

3.2.2 VSYNC Output

When operating in external event mode, camera outputs VSYNC signal on Opto-isolated OUT. The generated VSYNC pulse corresponds to the frame sent to the host. This signal can be used to verify frame jitter (the delay between the applied input trigger pulse and the frame generated).

4. Software Configuration

4.1 Camera Settings

FRAMOS D400e camera series can operate in following modes:

- Default Mode
- Master Mode
- Slave Mode
- External Event Mode

If it is required to synchronize camera to an external event, camera must be set to "External Event Mode".

For additional information on other operating modes, please refer to *FRAMOS Industrial Depth Camera D400e Series - Multi-Camera Synchronization* [Ref-2] application note.

4.1.1 Setting Operating Mode

External event operating mode can be set for both Stereo Module and RGB camera. Option "RS2_OPTION_INTER_CAM_SYNC_MODE" is used for setting the camera operating mode.

```
// Stereo Module
enum cs_inter_cam_sync_mode
{
    CS_INTERCAM_SYNC_DEFAULT = 0,
    CS_INTERCAM_SYNC_MASTER = 1,
    CS_INTERCAM_SYNC_SLAVE = 2,
    CS_INTERCAM_SYNC_EXTERNAL = 3,
    CS_INTERCAM_SYNC_MAX = 4 //enumeration purpose only
};

// RGB Camera
enum cs_inter_cam_sync_mode_color
{
    CS_INTERCAM_SYNC_DEFAULT_COLOR = 0,
    CS_INTERCAM_SYNC_EXTERNAL_COLOR = 1,
    CS_INTERCAM_SYNC_MAX_COLOR = 2 //enumeration purpose only
};
```

Example of configuring camera operation mode through Intel RealSense Viewer is shown in Figure 10.

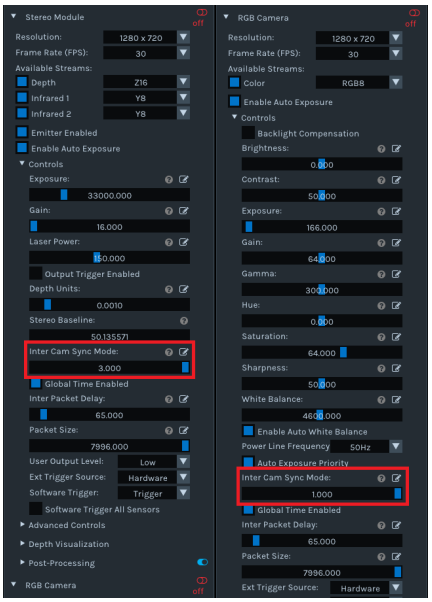

Figure 10 – Setting camera operating mode to external event mode

To set the operating mode in code, call the "set_option" function with option name and requested value as shown below.

```
// To set an option to a different value, call set_option with a new value
depth_sensor.set_option(RS2_OPTION_INTER_CAM_SYNC_MODE, CS_INTERCAM_SYNC_EXTERNAL);
color_sensor.set_option(RS2_OPTION_INTER_CAM_SYNC_MODE, CS_INTERCAM_SYNC_EXTERNAL_COLOR);
```

4.1.2 External Event Mode

When FRAMOS D400e camera series is set to "External Event Mode" and stream is started, following sources can be selected for generating the pulse applied to camera:

- Hardware
- Software

4.1.2.1 Hardware Source

Example of selecting hardware trigger source for external event mode through Intel RealSense Viewer is shown in Figure 11.

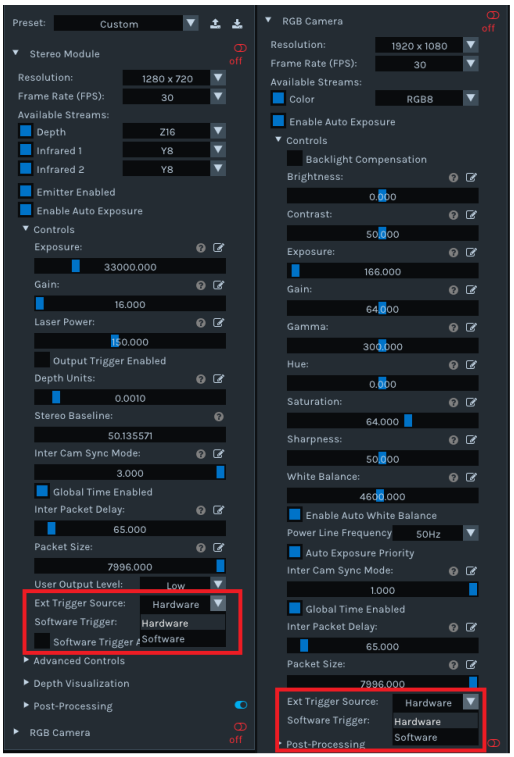

Figure 11 – Selecting external event source: Hardware

To select the hardware trigger source mode in code, call the "set_option" function with option name and requested value as shown below.

```
// To set an option to a different value, call set_option with a new value
depth_sensor.set_option(RS2_OPTION_EXT_TRIGGER_SOURCE, 1);
color_sensor.set_option(RS2_OPTION_EXT_TRIGGER_SOURCE, 1);
```

4.1.2.2 Software Source

Example of selecting software trigger source for external event mode through Intel RealSense Viewer is shown in Figure 12.

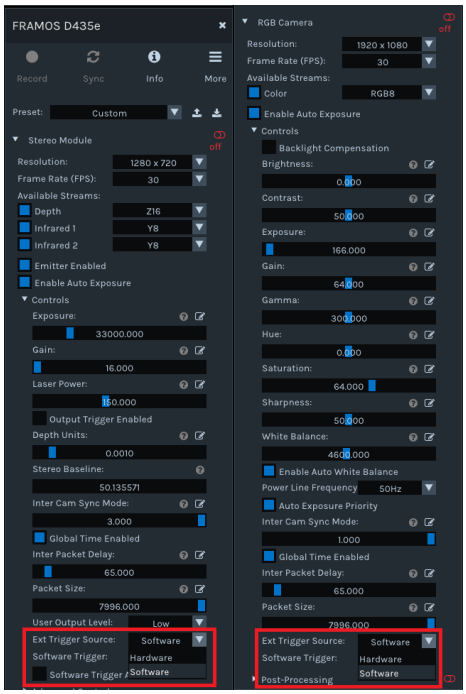

Figure 12 – Selecting external event source: Software

To select the software trigger source mode in code, call the "set_option" function with option name and requested value as shown below.

```
// To set an option to a different value, call set_option with a new value
depth_sensor.set_option(RS2_OPTION_EXT_TRIGGER_SOURCE, 2);
color_sensor.set_option(RS2_OPTION_EXT_TRIGGER_SOURCE, 2);
```

4.1.2.3 Setting RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS Option

Option "RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS" is available only when camera is set to "External Event Software Trigger" mode.

Example of setting "RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS" through Intel RealSense Viewer is shown in Figure 13.

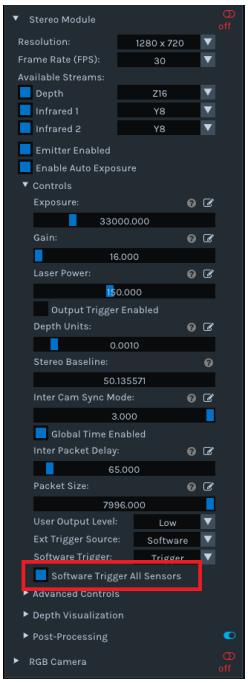

Figure 13 – Setting RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS

To set the " RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS" in code, call the "set_option" function with option name and requested value as shown below.

```
// To set an option to a different value, call set_option with a new value
depth_sensor.set_option(RS2_OPTION_SOFTWARE_TRIGGER_ALL_SENSORS, 1);
```

4.1.2.4 Executing Software Trigger

Example of executing software trigger through Intel RealSense Viewer is shown in Figure 14.

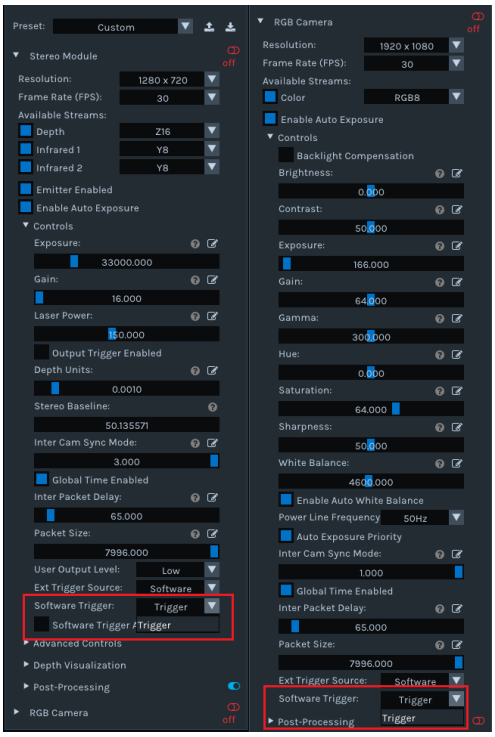

Figure 14 – Executing software trigger

To execute software trigger in code, call the "set_option" function with option name and value as shown below.

```
// Executing software trigger
depth_sensor.set_option(RS2_OPTION_SOFTWARE_TRIGGER, 1);
color_sensor.set_option(RS2_OPTION_SOFTWARE_TRIGGER, 1);
```

Information: All the given examples of configuring the camera to external event software trigger operating mode can be found in "rs-software-trigger" example that is part of D400e software package v1.8.0 and above.

5. Hardware Validation

External Event Camera Synchronization validation is performed using FRAMOS D435e camera and Function Generator.

5.1 Frame Jitter

As mentioned in Chapter 2.1, frame jitter is less than 1/FPS when external event synchronization is used.

For a validation, following test scenario is applied:

- Resolution: 1280x720
- Streams: Depth, Infrared, Color
- Frame Rate: 30 FPS
- External Event Frequency: 14 Hz

Results for more than 10000 trigger pulses applied to camera synchronization interface are given in Table 5 and shown in Figure 15.

Measurement	Mean [ms]	Min [µs]	Max [ms]	Std Dev [ms]
Frame Jitter	16.70	2.628	33.32	9.624

Table 5 – Frame Jitter Result on 10000 Trigger Pulses

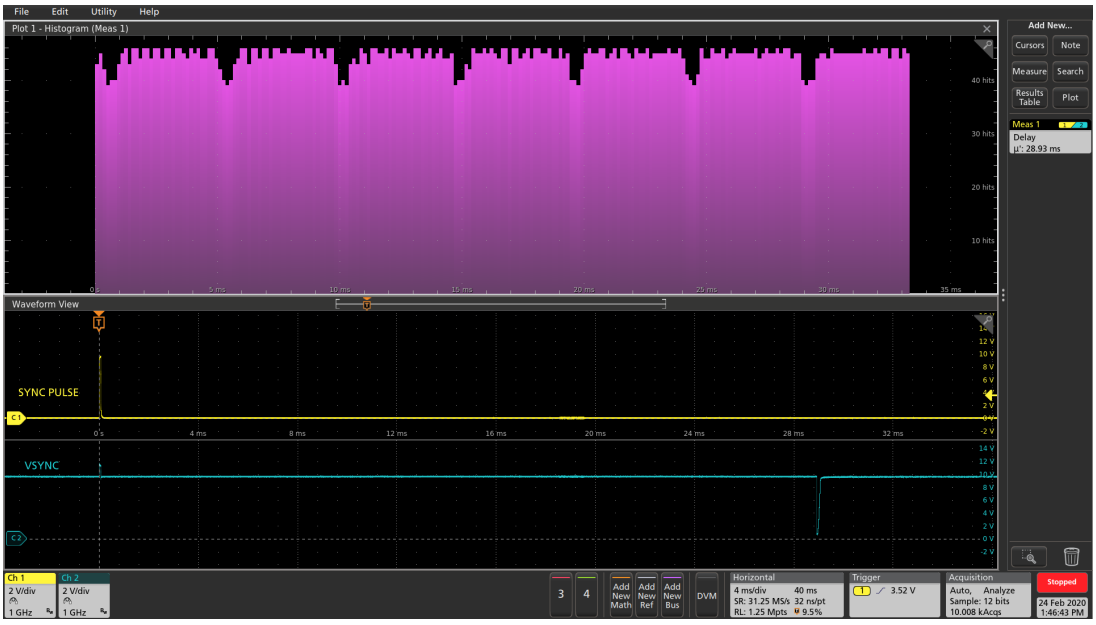

Figure 15 – Real Time Frame Jitter Histogram

SYNC PULSE in Figure 9 is trigger pulse applied to camera and VSYNC represents the start of the generated frame that is sent to host.

Histogram shows different frame jitter captured, varying from 2.63 µs to 33.32 ms.

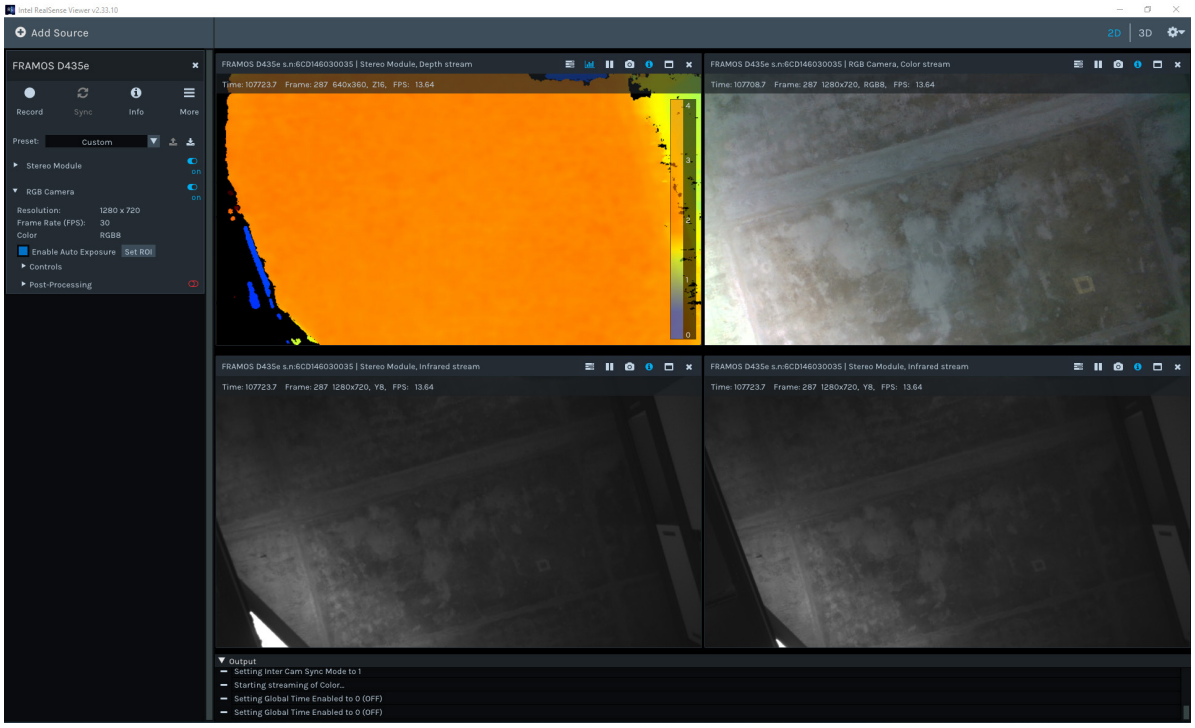

Figure 16 – FRAMOS D435e Camera Streaming in External Event Mode

FRAMOS D435e camera streaming in external event mode is shown in Figure 16.

6. Troubleshooting

This chapter provides troubleshooting information for various issues related to synchronizing D400e cameras with external events.

6.1 Software Trigger Issues

6.1.1 Exceptions

Certain options related to software triggering are dependent on other options. For this reason, RealSense library may throw exceptions if using those features when camera is not in expected operating mode.

Recommended steps to enable software triggering mode and send software triggers to camera:

1. Set the operating mode to "External Event" operating mode (Refer to Chapter 4.1.1).
2. Set the external trigger source to "Software" (Refer to Chapter 4.1.2).
3. Execute "Software Trigger" (Refer to Chapter 4.1.2).

Following exception can be thrown when changing external trigger source, and camera operating mode is not set to "External Event" operating mode.

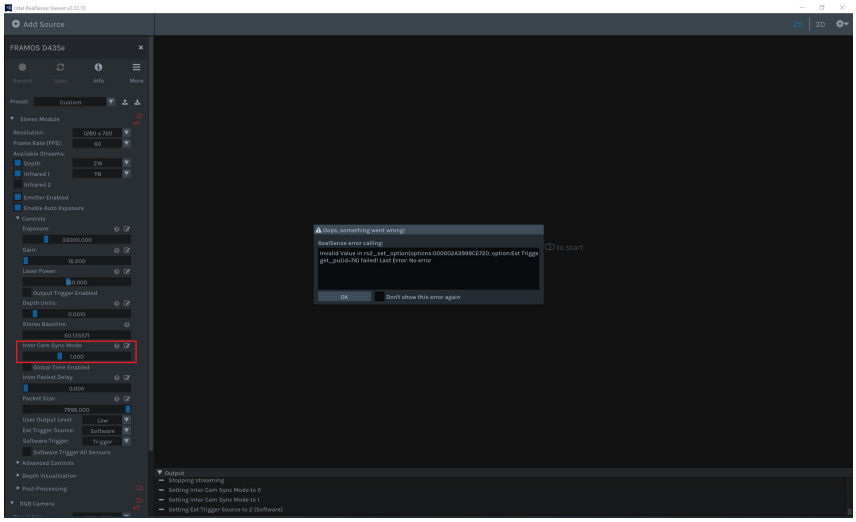

Figure 17 – Changing "Ext Trigger Source" in wrong "Inter Cam Sync Mode"

Exception can be thrown when trying to execute "Software Trigger" and external trigger source is not set to "Software" as shown in Figure 18.

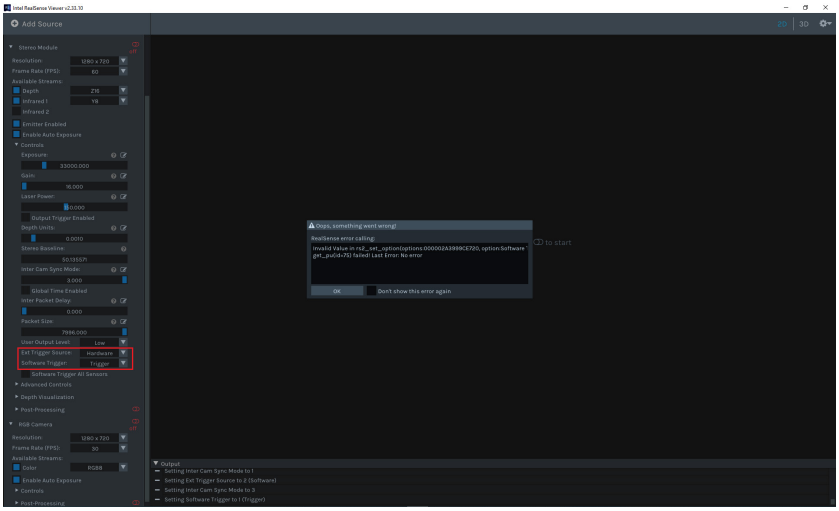

Figure 18 – Executing "Software Trigger" with wrong "Ext Trigger Source"

6.1.2 Rendering

When using software trigger, all frames may not be visualized in RealSense Viewer as it can be seen in Figure 19: one of the infrared sources shows different frame number. Frames are not dropped by the library but are just not shown in RealSense Viewer.

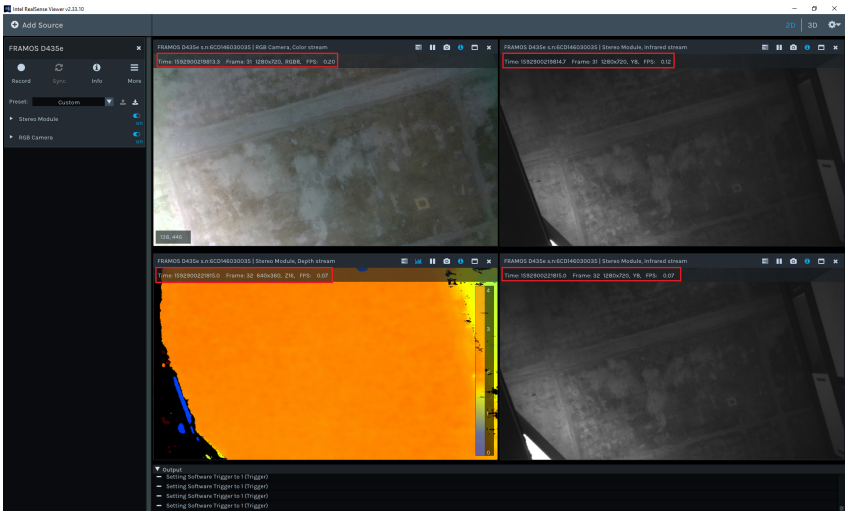

Figure 19 – Frame numbers vary with synchronization in RealSense Viewer enabled

When using external trigger mode, disable synchronization between the pointcloud and the texture using padlock in upper right corner in the RealSense Viewer as shown in Figure 20.

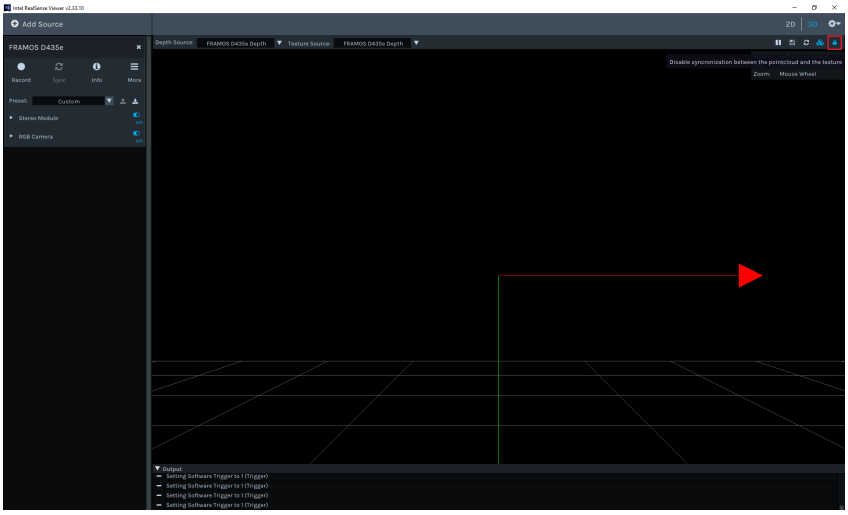

Figure 20 – Disable synchronization between the pointcloud and the texture

6.1.3 Post-processing

Some of the post-processing algorithms require multiple frames for calculations. If post-processing is active, depth information might not be updated correctly as shown in Figure 21.

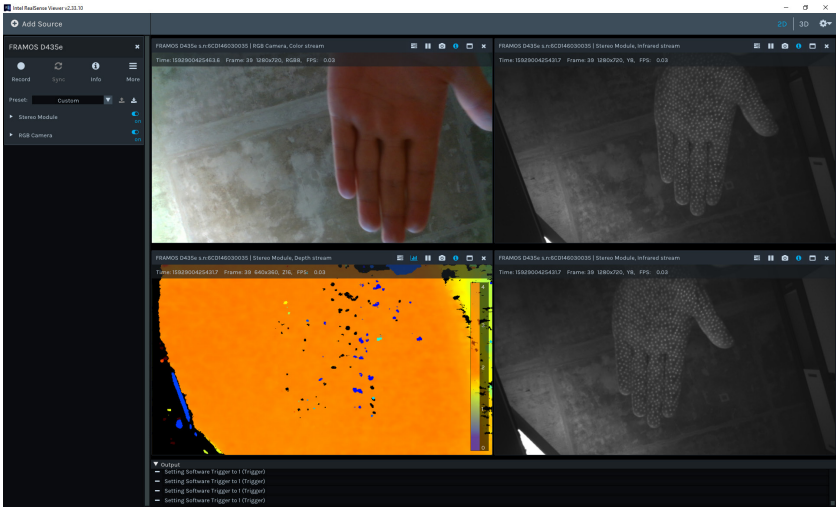

Figure 21 – Post-processing active

With post-processing disabled, depth information is properly updated as shown in Figure 22.

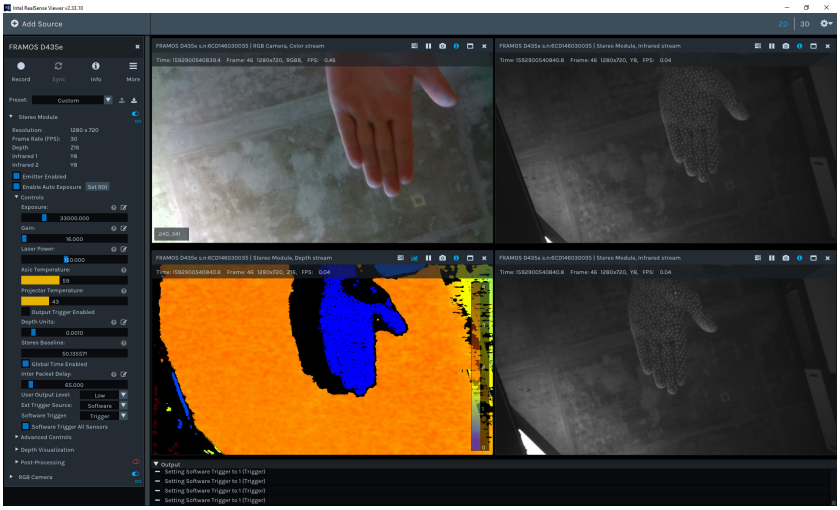

Figure 22 – Post-processing disabled

7. References

1. FRAMOS Industrial Depth Camera D400e Series - Tuning System For Best Performance v1.0, FRAMOS GmbH.
2. FRAMOS Industrial Depth Camera D400e Series - Multi-Camera Synchronization v1.0, FRAMOS GmbH.
3. FRAMOS Industrial Depth Camera D400e Series - User Manual v1.0, FRAMOS GmbH.

8. Revision History

Date	Version	Changes
2020-06-30	1.0.0	Initial release

Table 6 – Revision History

NOTE: *This document replaces and supersedes the application note "FRAMOS Industrial Depth Camera D435e - External Event Camera Synchronization" v1.1.0.*